



TrekTag[®] NFC

Temperature Data Logger





ARE YOU COVERED?

Perishable goods can spoil a supply or distribution channel. For over 60 years, Graphic Controls has provided solutions to record and interpret temperatures, serving industries such as food and beverage, floral and pharmaceuticals.

The TrekTag[®] NFC Temperature Data Logger is designed to bring reliability and peace of mind to the customer who requires temperature data they can use to focus on their brand, customers and bottom line.

We've paired TrekTag[®] NFC with an easy-to-use smartphone application and a convenient cloud platform. This package provides a complete temperature data logging solution.

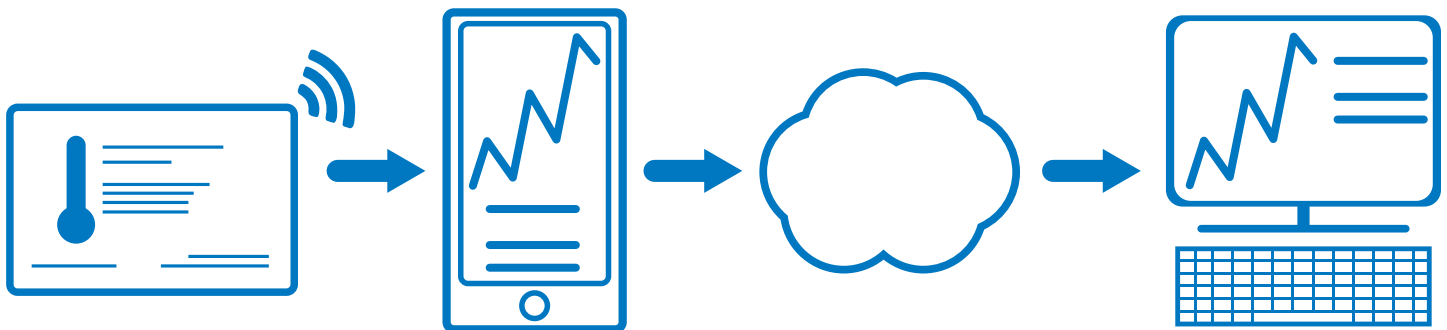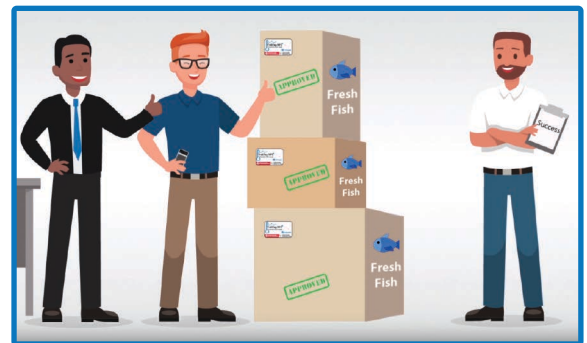

RELIABLE DATA LOGGING:

Scan the TrekTag using your android device. Get an instant report on your smartphone. Upload to the cloud to access from anywhere.



FEATURES:



SIMPLE ACTIVATION:

1. Download the app from the Google Play store on your android device.
2. Select from a preset profile or customize
3. Set up recording interval
4. Add shipment notes



CLOUD STORAGE:

- Easily accessible platform for data management
- Unique ID number allows for traceability through supply & distribution chain
- Customize user profiles to allow and/or restrict access
- Track scanned updates via programmable alerts



STRONG BATTERY LIFE:

- Printed battery technology gives long life without the bulkiness of a traditional battery.



FOOD GRADE ADHESIVE:

- Allows the shipper to attach to the shipping container without the worry of separation in transit.



DISPOSABLE:

- Eliminates the need to return physical equipment
- Does not contain any heavy metals



NFC:

- Activate/Read/Share shipment data from anywhere leveraging your current mobile device network
- No P.C., WI-FI, proprietary scanner or USB docking station needed

SPECIFICATIONS:

Temperature Accuracy:

+/- 0.5C Typical; +/- 1.5C Max

Temperature Range:

-20C to 65C

Temperature Recording Frequency

Every minute

Every 5 minutes

Every 15 minutes

Every hour

4 times per day

Recording Life

14.5 Hours

2 Days & 19 Hours

8 Days & 7 Hours

33 Days & 7 Hours

200 Days

For additional information or to order visit graphiccontrols.com/TrekTag
Call **800.669.1535** or email info@graphiccontrols.com